

TEMPERATURE		R134A	
°C	°F	kPa	psig
-50	-58		
-48	-54.4		
-46	-50.8		
-44	-47.2		
-42	-43.6		
-40	-40	-50	-7
-38	-36.4	-45	-6.5
-36	-32.8	-38	-6
-34	-29.2	-32	-5
-32	-25.6	-25	-4
-30	-22	-17	-2
-28	-18.4	-9	-1
-26	-14.8	0	0
-24	-11.2	10	1
-22	-7.6	20	3
-20	-4	31	4
-18	-0.4	43	6
-16	3.2	56	8
-14	6.8	69	10
-12	10.4	84	12
-10	14	99	14
-8	17.6	116	17
-6	21.2	133	19
-4	24.8	151	22
-2	28.4	171	25
0	32	191	28
2	35.6	213	31
4	39.2	236	34
6	42.8	261	38
8	46.4	286	41
10	50	313	45
12	53.6	342	50
14	57.2	372	54
16	60.8	403	58
18	64.4	436	63
20	68	470	68
22	71.6	507	74
24	75.2	544	79
26	78.8	584	85
28	82.4	626	91
30	86	669	97
32	89.6	714	104
34	93.2	761	110
36	96.8	810	117
38	100.4	862	125
40	104	915	133
42	107.6	971	141
44	111.2	1029	149
46	114.8	1089	158
48	118.4	1152	167
50	122	1217	177
52	125.6	1284	186
54	129.2	1354	196
56	132.8	1427	207
58	136.4	1502	218
60	140	1580	229